


DoorTM mag

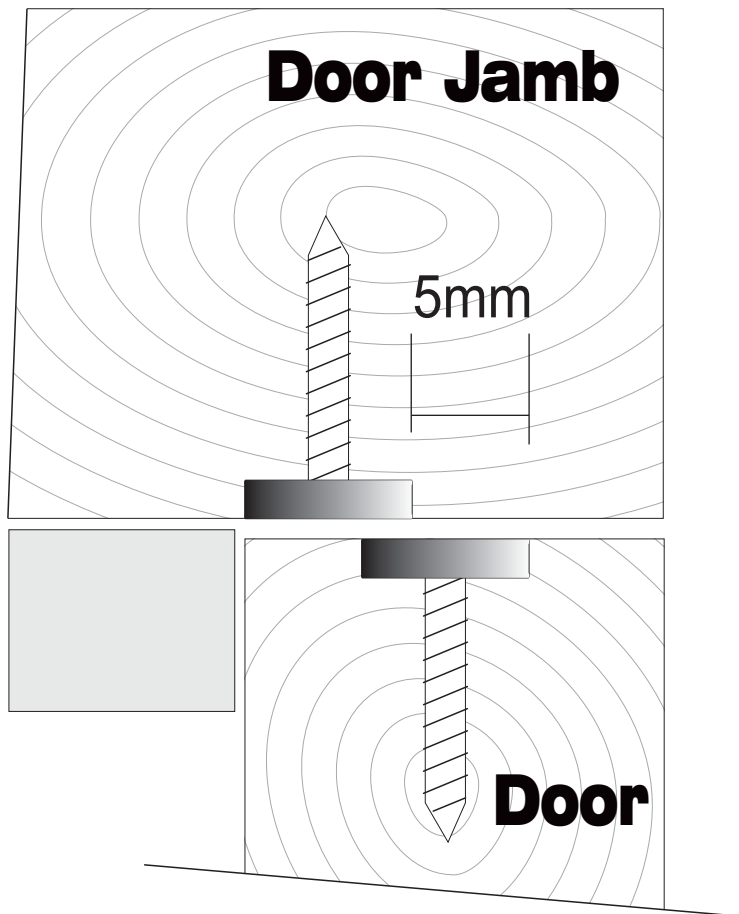

Mounting Instructions

1. Using a 22mm diameter drill bit, create a hole which will allow you to flush mount one of the magnets into the top of your door. Ensure that your hole is near the end of your door but also in the center of the width as illustrated.
2. Screw the magnet into the drilled hole. Ensuring the magnet countersunk side is facing out. If you are having issues screwing into your doorframe, pre drill a small pilot hole for the screw.
3. Locate the position for the other magnet in the door jamb, ensuring it is **offset by 5mm** as shown. Drill a second 22mm diameter hole & pilot hole if required.
4. Screw the second magnet into the drilled hole, with the countersunk side facing out.

Proudly manufactured by
Magnets New Zealand Ltd.
www.magnets.co.nz

Keep both magnets apart as they will shatter if they join with force.