


# Door<sup>TM</sup> mag PRO

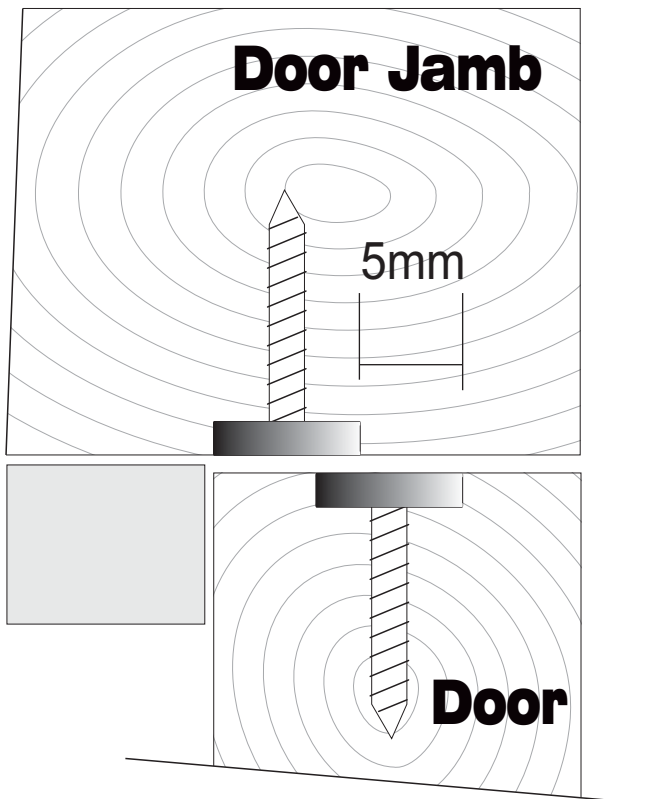

## Mounting Instructions

1. Using a 22mm drill bit, create a hole which will allow you to flush mount one of the magnets into the top of your door. Ensure that your hole is near the end of your door but also in the center of the width as illustrated.
2. Screw the magnet and one of the stainless steel cups into the drilled hole. Ensure the magnet countersunk side is facing out.  
If you are having issues screwing into your doorframe, pre drill another small pilot hole for the screw.
3. Locate the position for the other magnet in the door jam, ensuring it is **offset by 5mm** as shown. Drill a second 22mm diameter hole & pilot hole if required.
4. Screw the second magnet and stainless steel cup into the drilled hole. Ensure the countersunk side is facing out.

Proudly manufactured by  
Magnets New Zealand Ltd.  
[www.magnets.co.nz](http://www.magnets.co.nz)

**Keep both magnets apart as they will shatter if they join with force.**