
## Handee CELEBONA CONTRACTOR OF THE PARTY OF T

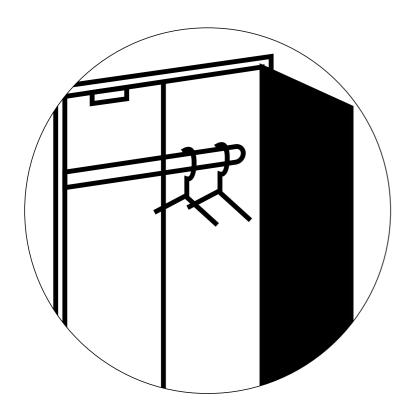

## **Heavy Duty**

## For Larger Doors & Wardrobes

Proudly manufactured by Magnets New Zealand Ltd. www.magnets.co.nz

## **Mounting Instructions**

- The catch can be mounted on the bottom, top or side of your shelf or cupboard. Find a suitable location for the unit
- 2. When you have found a location pre-drill your holes for the best fit and finish by either measuring the distance between the holes on the catch or by using the catch as a template.
- 3. Lightly tighten the screws so the catch can still move.
- 4. When the catch is fitted, place the striker plate onto the catch **pointy** face-out & close the door firmly so that the points pre-mark the mounting position on the door.
- 5. Screw the striker plate onto the door and tighten the catch screws. If you have difficulty screwing in the striker plates, pre drill the holes and then attach the plates.